



OWI available with benzodiazepines

C COC mAMP BZO

ID

CorAlert Employment Drug Testing Kits EmployeeDrugTestingAce.com Trusted Proven Secure www.DrugTestingAce.com www.EDTAce.com

OrAlert[™] Drug Screen

A Rapid Screening Test.

- Improved Sensitivity of Parent THC
- Zero Exposure Collection
- Split Specimen Well
- Detects Up To Six Drugs
- Simple Procedure

Innovative Drug Screening Solutions

Quality • Choices • Support

For Forensic Use Only

Instant Technologies, Inc.



an inverness medical company

OrAlertTM Drug Screen

OrAlert™ Drug Screen

A Rapid Screening Test.

Benefits to Oral Fluid Drug Testing:


- On-site testing
- Saves time & money
- Donor friendly
- · Tests multiple drugs at once
- · Simple one step procedure
- · No contact with specimen

				Catalog # Configuration:
C COC mAMP BZO			C THC OPI	DSF-765COC, THC, AMP, mAMP, OPI, PCP DSF-765-031COC, THC, AMP, mAMP, OPI, BZO
BZO	L	U	AMP	

Drug Name:	Calibrator:	Cutoff:
Amphetamine (AMP)	d-Amphetamine	50ng/mL
Methamphetamine (mAMP)	. d-Methamphetamine	.50ng/mL
Cocaine (COC)	Benzoylecgonie	20ng/mL
Opiates (OPI)	. Morphine	.40ng/mL
Marijuana (THC)	△9 - THC	100ng/mL
Phencyclidine (PCP)	Phencyclidine	10ng/mL
Benzodiazepines (BZO)	Oxazepam	. 10ng/mL

Procedure Card

For Forensic Use Only

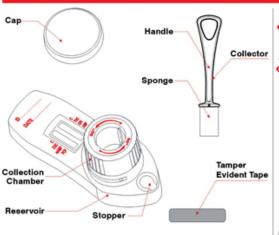

- Instruct the donor to not place anything in the mouth including food, drink, gum or tobacco products for at least 10 minutes prior to collection.
- Insert sponge end of collector into mouth.
 Actively swab the inside of the mouth and tongue with sponge. As soon as the sponge softens slightly, gently press the sponge between the tongue and teeth to ensure complete saturation.


 The sponge is saturated when no hard spots can be
- detected. Collect for a total of (3) minutes before removing sponge.





- · Insert collector into device so that the notches on the collector are aligned with the tracks on the inside of the collection chamber.
 - Push collector down into chamber.
 - · Turn collector clockwise to lock into chamber.
 - Wait 1 minute.





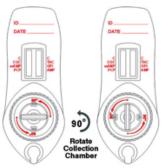



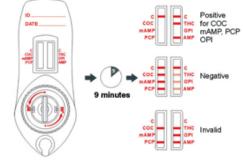

All positive results are presumptive and should be confirmed by an alternate method (e.g. GC/MS or GC/MS/MS).

- · If results are positive, remove collector from device and secure reservoir with tamper evident tape.
- · Secure cap onto collection chamber.
- Send device to laboratory for confirmation. Laboratory can access reservoir through stopper.

